

USING MICROPHONES

1. Turn **MICS+AMP** power switch ON above cabinet.
 2. If required, turn **HEARING LOOP** socket ON above cabinet. If using HEARING LOOP only, jump to step 4.
 3. Switch **AV AMP** ON; Press **MIC/MIX/PA** button; Check that **blue** indicator lamp is ON. If not on, press PURE AUDIO button (on left); Set volume to ~35.
 4. Move mic well away from speakers; Switch **on** by long press of button on end of mic; Another long press for mic off; Short press for **mute/unmute**.
 5. Hold mic ~10cm (4") from mouth.
 6. If Hearing Loop is ON, check green lamp on 'loop box' flashes when using mic.
- For detailed instructions see USER'S GUIDE **sections 1 & 2**.

USING MEDIA PLAYERS (SONY & PANASONIC)

MUSIC on CD:

The PANASONIC PLAYER has display to shown track numbers, etc.

Check AUDIO SET UP as listed on next page and/or USER'S GUIDE **section 3**.

MOVIES on DVD/Blu-Ray:

For 3D movies use only the SONY player.

For Hearing Loop with Movies use the PANASONIC player.

See USER'S GUIDE **section 4** for detailed 'Set up' and 'In use' instructions.

Check AUDIO SET UP as listed on next page.

See USER'S GUIDE **section 4** for detailed 'Breakdown' instructions.

For **Audio/Picture/Video FILES** on **DVD/CD/USB/SD** media:

See USER'S GUIDE **section 6** (some copies on back of cupboard door).

Check AUDIO SET UP as listed on next page.

LAPTOP/TABLET/SMARTPHONE DEVICES

Connection and configuration options are covered in USER'S GUIDE **section 5**.

Apple adapters are available.

Check AUDIO SET UP as listed on next page.

Detailed instructions in the USER'S GUIDE - light-green folder or QR Code.

USER'S GUIDE includes Problem Solving tips.

Important - Switch OFF all mics and AV equipment after use.

AUDIO SET UP (Listening Modes / Speaker selection)

LISTENING MODE - press 'Display' on AV AMP. Change with 1st/2nd of 3 buttons
If using removable media, wait until media is loaded.

Input selected

Listening Mode (press 'Display')

- MIC/MIX/PA **PURE - blue** indicator lamp is ON
- SONY (MOVIE) **DIRECT**
- All other inputs - **5.1** (surround) audio ... **DIRECT**
- All other inputs - **2.0** (stereo) audio, choose between:
 - DIRECT** - front speakers only
 - ALL CH ST[ereo]** - front and rear speakers
 - NEO:6 MUSIC** - surround effect

Note: PANASONIC audio also goes to Hearing Loop (if Hearing Loop is ON.)

PROJECTOR SET UP (Using Projector Remote)

Press **ON**; **Wait for warm up**.

Use projector remote to select (depending on connection method):

- D-SUB/SVGA .. Press **PC** (optional: Press **ASPECT** to check/adjust image size).
- HDMI or USB-C Press **HDMI 1** (has automatic image size adjustment).

Note: After making a change - expect delay before image reappears.

BRIGHTNESS:

Allow time for media to load (SONY player checks for 3D disk)

Using **Projector remote**, press **COLOUR MODE** to select:

- DYNAMIC then wait a few seconds - for highest brightness & contrast
- CINEMA then wait a few seconds - for lower contrast (e.g. movies)

When finished, press STANDBY to switch projector off.

VOLUME:

At Projector remote: Press: **VOLUME-** until **0** is displayed, then

At AV AMP: Adjust volume control (or use ONKYO / PANASONIC remote)
as required.



.....**USER'S GUIDE** – in light-green folder or use this QR Code
The USER'S GUIDE includes Problem Solving tips.
Switch OFF all mics and AV equipment after use.